
Schleibinger Shrinkage-Cone

*Schleibinger Geräte
Teubert u. Greim GmbH
Gewerbestrasse 4
84428 Buchbach
Germany
Tel. +49 8086 9473110
Fax. +49 8086 9473114
www.schleibinger.com
info@schleibinger.com*

February 11, 2019

REV03

Contents

1	Introduction	3
1.1	Taxonomy of Shrinkage Measurement Systems	3
2	Theory of Operation	6
2.1	Shrinkage Cone	6
3	Hardware Installation	8
3.1	Important Safety Hints - Shrinkage Cone	8
3.2	Requirements	8
3.3	Installation of the Data Logger for the Shrinkage Cone	8
3.4	Configuration of the Network access	9
3.4.1	Network configuration between data logger and PC	10
3.5	Thermocouples	13
3.6	Combined Humidity and Temperature Sensor	14
3.7	Balance Interface	15
4	Handling	16
4.1	Shrinkage-Cone	16
5	The Software	17
5.1	Recording Data	17
5.2	Software Handling	17
5.2.1	Singel Channel Setup	18
5.2.2	All Setup	19
5.2.3	Start Measurement of single sensor	20
5.2.4	Start Measurement with Quickstart	22
5.3	Transferring the datasets	23
5.3.1	Data file	23
5.3.2	Data Text single channels	23
5.3.3	All Channels	24
5.3.4	FTP	24
5.4	Plotting the Measurement Data in HTML5	25
5.4.1	Channel Selection	25
5.4.2	Zooming the Y-axis	25
5.4.3	Zooming the Time Axis	25
5.4.4	Insert a Legend	25
5.4.5	Printing the Graph	26
6	Bibliography	27

1 Introduction

Cementitious building materials change their volume during the hydration. This is a known phenomenon resulting from structural and environmental factors. The process can take up to months and years reflected in shrinkage or expansion of materials. For the most practical applications of building materials the changing of the volume is very harmful and has to be minimized.

Many theoretical models describe the causes of shrinkage and expanding of building materials on later ages, when the material has gained adequate strength. This includes drying shrinkage when water is losing to the environment and due to this volumetric change takes place. But also the occurrence of autogenous shrinkage which takes place without moisture transfer to the environment is of great importance for the shrinkage behaviour and thus on cracking risk of building materials.

While the autogenous shrinkage at later ages has been well documented and explained by self-desiccation behaviours there is no theoretical explanation of autogenous shrinkage at very early age during the first day of hydration. At early ages, the tensile capacity of cementitious materials is lowest and the risk of cracking is high. The mechanisms during the first hours of hydration are still not fully understood. Due to the difficulties in measurement or relatively high inaccuracy, the measurements of the volumetric changes at the early age are rarely performed. Therefore, it is more important to have suitable measuring instruments capable of measuring the volume change behaviour of the building materials from the beginning of the hydration, and on the other hand measuring equipment capable of simulating the environmental conditions from the field of application.

1.1 Taxonomy of Shrinkage Measurement Systems

The volume change of the building materials is of high interest when focusing on maintaining of durable structures. The change of the volume is often attributed to drying of the concrete over a long time period. Not only the drying shrinkage but also the thermal and particularly the autogenous shrinkage, which shows volume reduction resulting from internal chemical and structural changes, are of interest for the formation of cracks. The autogenous shrinkage for example is a big issue especially for the high strength or high performance concrete with the low water-to-cement ratios.

Due to the production process cementitious materials undergo different stages which are a liquid or plastic stage, intermediate stage of the setting and the hardened stage of the materials:

- fluid (F)
- setting time (S)
- hardened material (H)

For the shrinkage of cementitious materials two distinct stages can be defined which are early and later ages. The age of 24 hours and longer refer to the later age shrinkage. This is also the kind of shrinkage which is recorded by standardized measurements where a certain strength of the material is necessary.

The early stage is commonly defined as the first day while the cementitious materials are setting and starting to harden. The change of the

consistency of the cementitious material implements high requirements for a measuring system. At the plastic state, usual physical test methods can not be applied showing difficulties in measuring of the fluid materials.

The process of hydration of cementitious materials itself is influenced by the environmental conditions like temperature (freezing and thawing), humidity, and impact of gas, or salty or acid liquids. For shrinkage investigations only the environmental conditions have to be constant. On the other side the length change of the materials due to the change of the environmental conditions can be a factor for the resistance of these materials. This will be used for example for the detection of the reactivity of the material due to the alkali silicate reaction or for examination of freeze-thaw resistance of concrete.

In addition to the free shrinkage the measurement of the blocked or restrained shrinkage provides further information about the building materials. Under restrained shrinkage the age of cracking and induced tensile stress characteristics of mortar or concrete specimen can be determined.


The company **Schleibinger Geräte** provides testing equipment for a whole range of measurement of shrinkage behaviours of building materials:

- The Schleibinger **Shrinkage-Cone** - a measurement equipment for a very early shrinkage and expansion of building materials like paste, mortar, plaster etc. A contactless laser sensor allows recording the data directly after the filling of cone-formed specimen container.
- The Schleibinger **Thin-Layer-Measurement-System** - measurement equipment for a very early measurement of the volume change of the building materials such as paste, mortar, plaster, self-leveling compounds or other materials applicated as a thin layer. Two laser units allow a contactless measurement of the shrinkage or the expansion of these materials.
- The Schleibinger **Shrinkage Drains** - for continuous measuring of shrinkage and expansion using a movable anchor.
- The Schleibinger **Bending Drain** - for measurement of the volume change and the curling of the specimen. Influence of floor heating can be simulated.
- The Schleibinger **Shrinkage Ring** - for the determination of age of cracking and induced tensile stress under restrained shrinkage (according to ASTM C1581)

Due to different stages of the building materials fluid (F), setting time (S) and hardened stage (H) different equipment for different stages can be used. Figure 1 shows the different measurement devices for the measurement of the volume change behaviours of the building materials.




(a) Shrinkage Cone

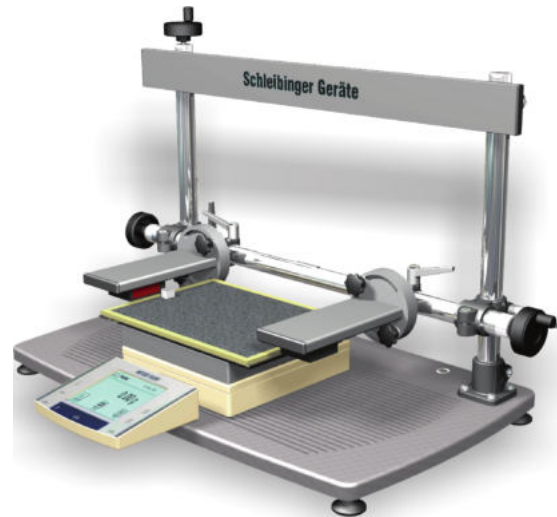


(b) Thin-Layer-Measurement-System




(c) Shrinkage Drain

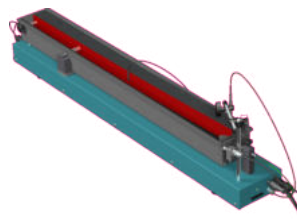

(d) Bending Drain

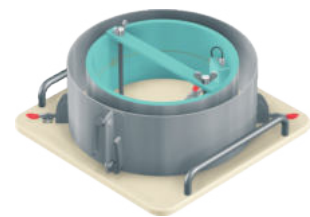

(e) Shrinkage Ring

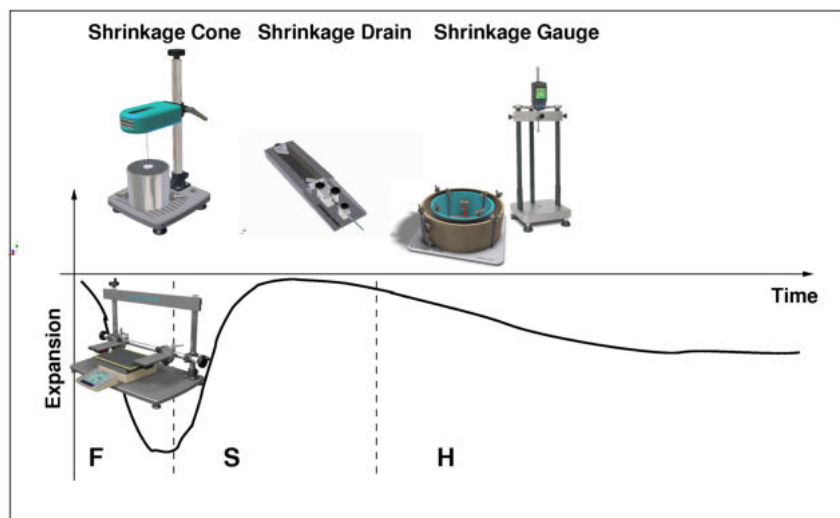

(f) Shrinkage over time

Figure 1: Schleibinger Shrinkage measurement equipment

2 Theory of Operation



2.1 Shrinkage Cone

For the measuring of shrinkage or expansion of the building materials during the setting time a contactless measurement has to be performed. One of the possibilities to measure the shrinkage behaviours is to measure according to the ASTM Standard C 827-95a "Change in Height at Early Ages of Cylindrical Specimens from Cementitious Mixtures" [3]. Using this standard a ball with a diameter of 10 mm and a density of $1.2\text{kg}/\text{dm}^3$ will be placed on the surface of the sample which is filled into a cylindrical mold. With a light source and a lens, the ball is projected onto the wall. The motion of the projection should be displayed hourly with a pencil.

In addition to the obsolete distance measurement technique, the disadvantage of this method is the use of a rigid cylindrical mold. Under the prerequisite of an isotropic shrinkage and expansion, the material expands not only in the vertical but also in the horizontal direction. As long as the material is liquid enough, only a change in the height occurs. As soon as the material has a certain stiffness, an undefined displacement of the material takes place, which leads to a volume change in both directions vertically and horizontally. Therefore, when using of a cylindrical mold, at least half of information is lost.

This disadvantage can be avoided by using a sample container shaped like an upward pyramid or a cone. Using a cone-shaped sample container and assuming an isotropic volume change of the sample, only one change in height occurs [9] (see figure 2).

Why a cone works...

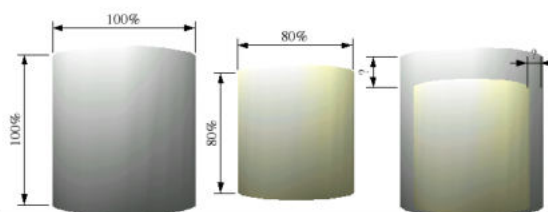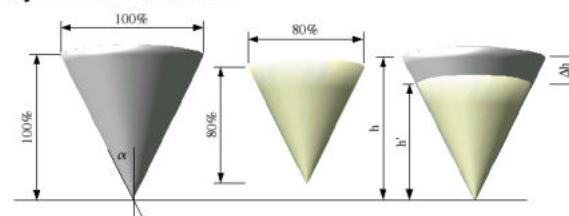

..and a cylinder doesn't work

Figure 2: Under the prerequisite of an isotropic shrinkage (or expansion), the radius r and the height h of a cone shrink (expand) in the same way: $h' = k \cdot h$ and $r' = k \cdot r$ (k for example 80%) $\Rightarrow V'/V = 0.8^3 = 0.512$

It can be shown mathematically that the volume change of the cone is proportional to the change in the height and vice versa (see equation 1):

$$\begin{aligned}
 \text{General : } V &= \frac{1}{3}\pi r^2 h; V' = \frac{1}{3}\pi r'^2 h' \\
 r &= h \tan(\alpha) \Rightarrow V = \frac{1}{3}(h \tan(\alpha))^2 \pi h \\
 \alpha = \text{const} &\Rightarrow V = ch^3; V' = ch'^3 \quad (1) \\
 \frac{V'}{V} &= \frac{h'^3}{h^3} \Rightarrow \frac{h'}{h} = \sqrt[3]{\frac{V'}{V}}
 \end{aligned}$$

A practical realization of this setup is shown in figure 3.

The measurements can be performed temperature-controlled due to the double wall formed sample container. The wall friction is avoided by using of a polypropylene foil between the container and the sample. A triangulation LASER sensor is measuring the height change with an accuracy of some μm . To prevent evaporation on the top surface the sample may be covered by a transparent silicone oil, or a stainless steel foil. A standard plastic foil is not diffusion resistant and is not recommended. A reflector can be used if the air bubbles rise to the surface below the LASER beam position.



Figure 3: The Shrinkage Cone as exploded view. Cone formed sample container, partition foil, sample and reflector

3 Hardware Installation

3.1 Important Safety Hints - Shrinkage Cone

The Laser of the shrinkage cone is working at the wavelength of 670 nm. The maximum output power is 1mW. Laser protection class 2 according DIN EN 60825-1:2008-05.

Don't look into the laser beam! Laser protective eyewear are urgently recommended!

Please use the laser only according to your national laws.

3.2 Requirements

The Shrinkage Cone, the TLMS, the Bending Drain, the Shrinkage Drain and the Shrinkage Ring are delivered with a data logger. The data logger records the measurement values for several months depending on recording interval (sampling rate) and the amount of channels connected. The data sets are stored nonvolatile in the data logger. The logger is equipped with a network interface.

It may be integrated in a local intranet as well as into the worldwide Internet. As user interface PC with an actual Internet browser like Firefox 24+, Internet Explorer 9+, Microsoft Edge, Chrome 25+, Opera 15+, ... will be used. No special operating system of the computer is needed. Even a tablet with Android or iOS system can be used.

The computer must be equipped with an Ethernet network interface running the TCP/IP protocol. During the measurement no running computer is needed. The configuration is described in detail in section 3.4.

In addition to the http protocol the file transfer protocol (ftp) can be used for readout of the data. The username for the ftp protocol and the password are `ftp`.

For debugging purposes it is possible to login with the telnet protocol. The username and the password are `tel`.

3.3 Installation of the Data Logger for the Shrinkage Cone

- The Laser sensor is mounted on the Shrinkage cone head.
- Connect the Laser cable to the data logger in the appropriate way (Fig. 4, 5).
- Connect the temperature, or temperature/humidity sensor to the connectors on the backside of the logger.
- Connect the balance to the backside 9-pin D-Sub connector of the data logger. Be sure that the serial interface of the balance is activated (chapter 3.7).
- Turn on the balance. The balance should always be turned on before the data logger.
- The data logger will be delivered with a 240V / 50 Hz power supply. Connect the power supply with the 3 pin DIN plug to the data logger (Fig. 4). After some seconds the data logger is running and the LED indicator lights up green.
- Configure the network interface as described in chapter 3.4.
- IP address will be obtained automatically (default setting)



Figure 4: Data logger: front side and back side.

- If no automatic IP address assignment is possible, the data logger requires a free IP address. The logger is delivered with the address written on a label on the bottom-side of the data-logger. Please use the Windows program Chiptool.exe (delivered with the data logger on the USB stick) to change the IP address. For more informations visit: <http://schleibinger.com/chiptool/>

On the Laser sensor itself is a muticolor LED. From the LED color, the base distance of the Laser sensor can be adjusted to the reflected surface. The optimal position before starting measurement LED color showing "yellow".

color	meaning
green	The position of the Laser is within the measuring range
red	The position of the Laser is out or range!
yellow	The position of the Laser is in the middle of the measuring range

3.4 Configuration of the Network access

The Schleibinger data logger, the Slabtester and the CDF machine are equipped with a *100 BaseT* network interface. It can be integrated within

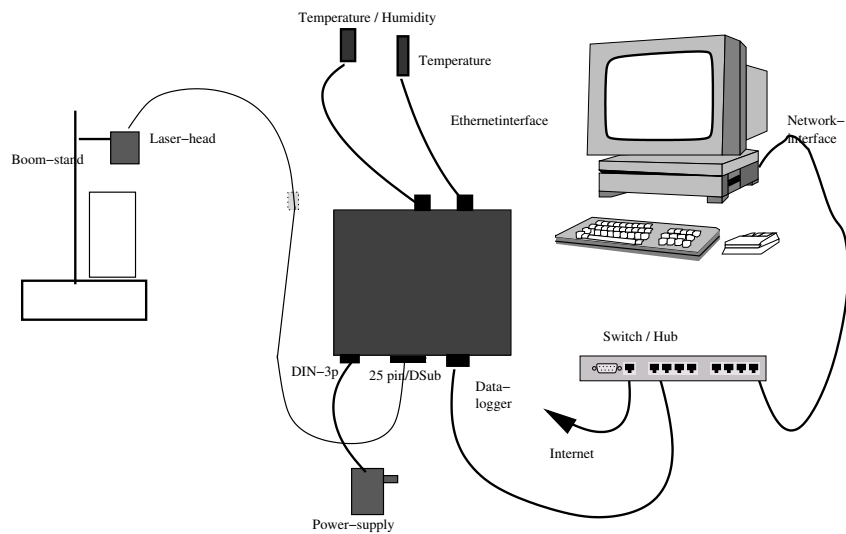


Figure 5: Wiring the shrinkage cone

a local Intranet or globally into the Internet. The network configuration can be done with the program Chiptool which can be found on USB stick delivered with the equipment or downloaded from the page:

www.schleibinger.com/chiptool.

Example of Default Settings:

```
Device: Data logger for the shrinkage cone
Customer: Miximaxi AG
Serial Nr: 201312324
MAC-ID: 00:30:56:90:7D:C3
Hostname: Scone_201312324
[] Obtain an IP-Address automatically
[] Use the following IP-Adresse: IP adresse:.....
Subnet mask:.....
```

3.4.1 Network configuration between data logger and PC

There are two options for the network configuration of the data logger and PC available:

- by automatically getting an IP address = default setting at time of delivery
- by using a static IP address

Automatically getting IP address

Connection of the data logger into a local network with DHCP- and DNS-Server is the simplest and fastest method.

- Connect the data logger with your local network (switch) using the network cable which was delivered with the device and switch on the data logger (24V adapter)
- Enter the host name into the address line of your browser in a form "**http://...**" (Fig. 6.)

A DHCP-Server assigns a free IP address to the data logger. You can access the data logger via the default host name using the DNS (Fig. 6).

Hint: DHCP server are scanning the network from time to time assigning a IP address and a symbolic name to all computers in the network. This procedure may take some time. So please wait some minutes until you try to access the data logger with its host name.

Alternatively, in the case the host name - DNS-server does not work or supported in your network the connection with the data logger can be done by using of the assigned IP address. This IP address can be found from the program Chiptool, mentioned above (Fig. 7).

Make sure the data logger always getting the same IP address from the DHCP server. Enter the IP address assigned by the DHCP server into the address line of the browser instead of the host name (Fig. 8).

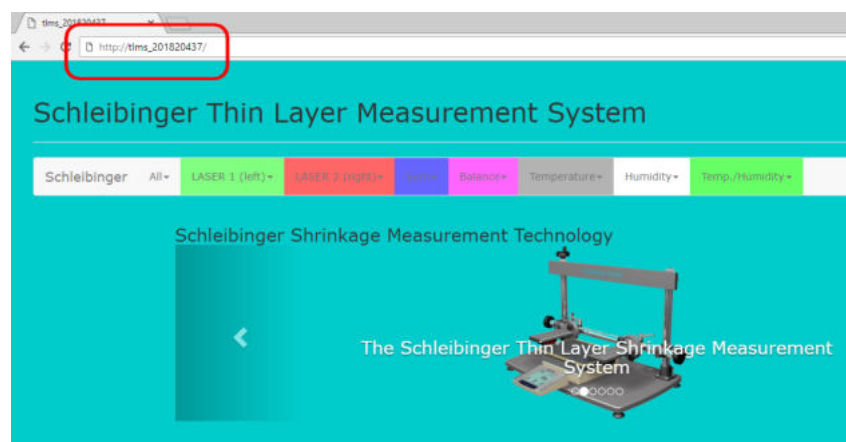


Figure 6: Accessing the data logger with a symbolic server name.

I	Snr	Name	DHCP	IP	Netmask	Gateway	Target	ID	I/O	RTOS	I/OType
00E88A	Bdram_2017demo		Yes	192.168.1.212	255.255.255.0	192.168.1.19	SC24	00305630E88A	2.0	V2.01	ETH
00E88C	AKR_201720095		Yes	192.168.1.174	255.255.255.0	192.168.1.19	SC24	00305630E88C	2.0	V2.01	ETH
00E88D	Slab_041384963		Yes	192.168.1.205	255.255.255.0	192.168.1.19	SC24	00305630E88D	2.0	V2.01	ETH
0271B4	Stabtester_Sep_07_07		Yes	192.168.1.202	255.255.255.0	192.168.1.19	SC12	003056F271B4	2.0	V1.25	ETH

Figure 7: Readout the IP address to the data logger with the program chiptool.

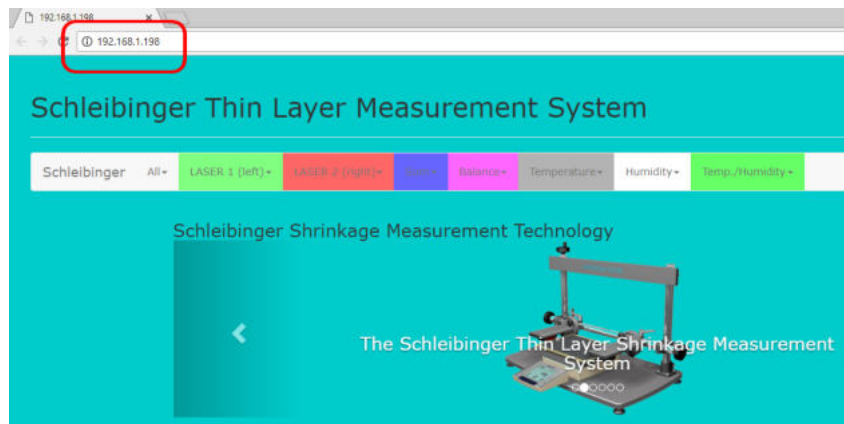


Figure 8: Accessing the data logger with a fix IP address.

using static IP address

If no network available or you are not allowed to connect a measurement device into your local network, the Schleibinger data logger can be connected directly to a PC, e.g. with an older notebook. Most of the PCs are configured in a way, that they take an IP address automatically assigned by the DHCP server. In case of a direct connection between data logger and PC, both peers are missing the DHCP server. For this chase use a static IP address.

a) set static IP address on the computer:

Open Control Panel → Network and Internet → LAN-Connection → Properties and set a static IP-address from the so called private area e.g. 192.168.1.1 and a sub net mask 255.255.255.0. Gateway doesn't has to be set. See figure 9

b) set static IP address on the data logger:

Connect the data logger and the PC with the static IP address with a cross-wired Ethernet cable (Cat5, RJ45)- not delivered with the equipment, and start the program chiptool. The program is searching for the data logger and if the PC is configured correctly and the right connection cable is used, the Schleibinger device appears in the window of the program. Click with the right mouse button on the entry within the window and choose IP configuration. A small window appears. Enter an other static IP address from the same private area as well [Fig. 10). This IP address has to be different from one of PC e.g. 192.168.1.2 and the same sub net mask. Finally click on Config.

Enter the new IP address of the data logger in the header of the browser. The main page of the data logger should appear.

For the integration of the data logger into the network infrastruaction, please, ask your network administrator.

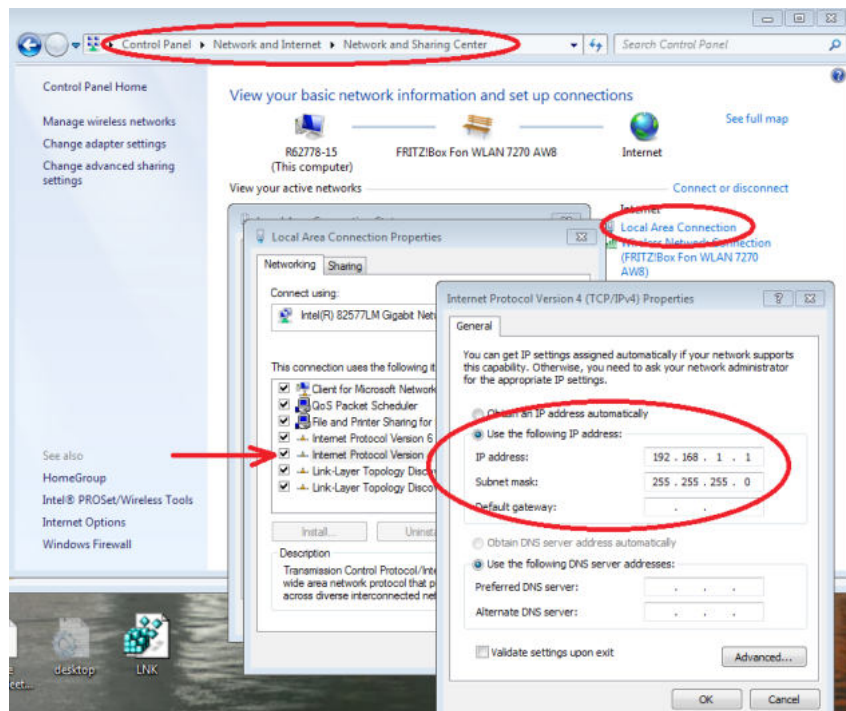


Figure 9: Configuration of PC for a direct connection with data logger.

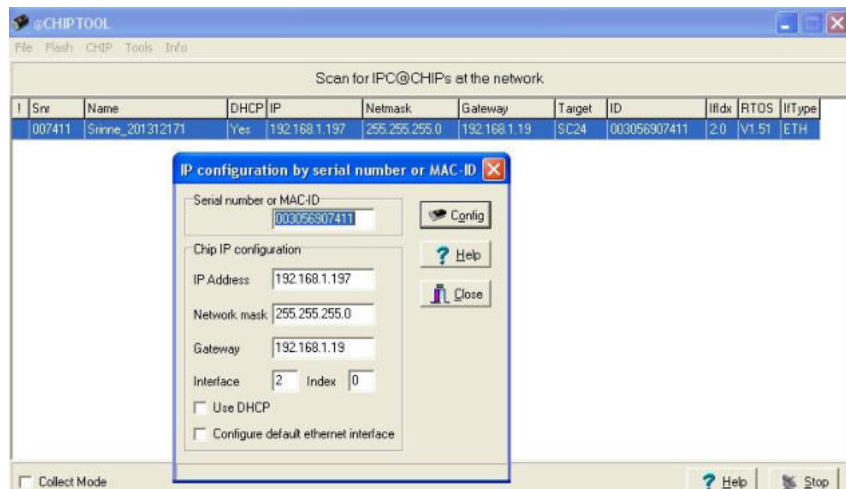


Figure 10: Configuration of the data logger for direct connection using program chiptool.

3.5 Thermocouples

As an option thermocouples can be connected to the data logger or the strain gage amplifier of the Shrinkage Rings for measuring the specimen temperature.

A thermocouple is a temperature-measuring device consisting of two dissimilar conductors that contact each other at one or more spots, where a temperature differential is experienced by the different conductors (or semiconductors). It generates a voltage when the temperature of one

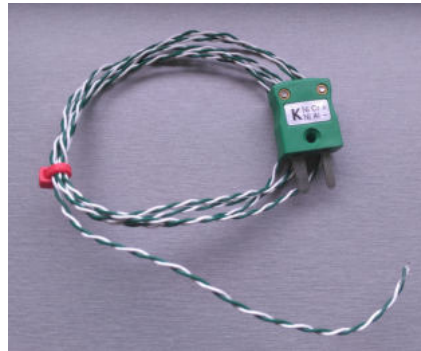


Figure 11: Thermocouple type K

of the spots differs from the reference temperature at other parts of the circuit. Thermocouples are a widely used type of temperature sensor for measurement and control. Commercial thermocouples are inexpensive, interchangeable, supplied with standard connectors, and can measure a wide range of temperatures. The main limitation of the thermocouples is their accuracy: system errors of less than one degree Celsius ($^{\circ}\text{C}$) can be difficult to achieve.

There are different types of thermocouples on the market available. Type K (chromel / alumel) is the most common thermocouple type with a sensitivity of approximately $41\mu\text{V}/\text{C}$ (chromel positive relative to alumel when the junction temperature is higher than the reference temperature) (Fig. 11]. This type K of thermocouple is cost-effective and available in a wide variety of probes with the temperature range from $-200\text{ }^{\circ}\text{C}$ to $+1350\text{ }^{\circ}\text{C}$.¹

Attention: Please, use Type K thermocouples with the Schleibinger data logger only. Otherwise the results will be incorrect!

After the measurement, the thermocouple can be simply pulled out of the sample. If it is not possible, cut it off. Thermocouple can be reused by removing the insulation from the cable head and twisting the cables.

If no thermocouple is connected or it is broken, the temperature will still displayed on the device. This temperature is the temperature or the cold spot at the temperature plug of the data logger.

please note!

3.6 Combined Humidity and Temperature Sensor

A combined relative humidity and temperature sensor (SHT75) for the measurement of the environmental conditions can be connected to the data logger as well (Fig. 12). This sensor integrate sensor elements plus signal processing in compact format and provide a fully calibrated digital output. A capacitive sensor element is used for measuring relative humidity while temperature is measured by a band-gap sensor. Both sensors are seamlessly coupled to a 14bit analog to digital converter and a serial interface circuit. This results in good signal quality, a fast response time and insensitivity to external disturbances (Fig.13)².

¹ Text partly from: Wikipedia contributors. "Thermocouple." Wikipedia, The Free Encyclopedia. Wikipedia, The Free Encyclopedia, 31 May. 2015. Web. 5 Jun. 2015.

² Text partly from: Datasheet SHT7x, Humidity and Temperature Sensor IC.

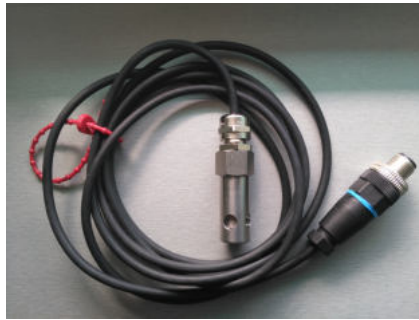


Figure 12: combined humidity and temperature sensor

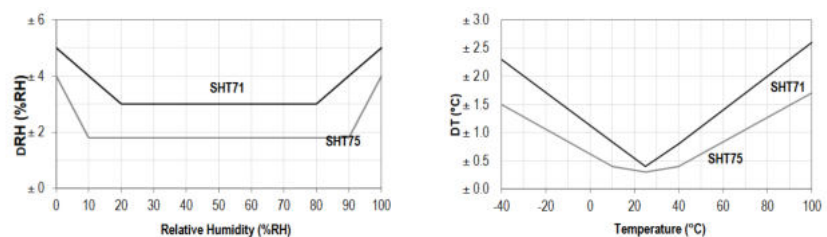


Figure 13: SHT75 sensor used with maximal RH-tolerance at 25 °C (left) and maximal T-tolerance (right)

3.7 Balance Interface

Drying shrinkage is defined as the contracting of a hardened concrete mixture due to the loss of capillary water. This shrinkage causes an increase in tensile stress, which may lead to cracking, internal warping, and external deflection, before the concrete is subjected to any kind of loading. Portland cement based concrete undergoes drying shrinkage or hydral volume change. The consideration of the volume change of concrete is particularly important for an engineer and the building design.

Drying shrinkage can occur in slabs, beams, columns, bearing walls, prestressed members, tanks, and foundations (source: The Pennsylvania State Univ.).

Water loss associated with the drying shrinkage can be measured by a balance. The balance can be placed under the sample and connected to the data logger (Fig. 4). Current three manufacturers are supported: Kern, Mettler-Toledo and Sartorius. A RS232 interface is used. For the USB connection a interface cable from the balance manufacturer is required.

Setting parameters of the balance:

- serial interface
- 9600 band, 8bit-1-N adjustment
- automatic calibration is set to "OFF"
- for the connection with the data logger, balance should be switched on first.

4 Handling

4.1 Shrinkage-Cone

As far as possible, the installation of the Shrinkage Cone should be done at room conditions. The length change ratio of steel and concrete is about $12\mu\text{m}/\text{Km}$. The effective working error of the complete measurement system is $< 1\mu\text{m}/\text{K}$.

The installation should be done on the vibration free underground. Please avoid direct sunlight or other direct lights.

Attention: Don't look into the laser beam! Laser protective eye-wear are urgently recommended!

Please note: Due to thermal stabilisation of the Laser the system should be put into operation about 20 minutes before the start of the measurement.

The preparation for the measurement with the Shrinkage Cone can be done as following:

- Connect all needed parts with the data logger as described in chapter 3.3.
- turn on the system
- Place a thin cone shaped foil made out of Polyethylene within the specimen container
- Fill the sample into the specimen container. **Attention:** Fill the sample container slowly. Fix the foil during filling container to prevent it from slipping. Do not overfill the sample container! Do not use damaged foils! Level the specimen surface by smooth shaking of the specimen container.
- Place the specimen container with the sample under the LASER sensor and if necessary on the balance.
- Place a reflector for a LASER beam on the surface of the sample in the way the Laser beam will be reflected and the LED light on the Laser sensor is lighting yellow/green. If the sample surface during the measurement is smooth enough the measurement can be done without reflector.

The adjustments of the Laser position will be done by a hand wheel:

- The height of the Laser sensor position will be adjusted by turning the upper hand wheel on the top of the Shrinkage Cone device.

Before starting measurements the Laser sensor has to be placed in the middle of the measuring range which is about **32750** of raw value (Fig. 14). The procedure for the finding of the correct sensor position should be performed as follows:

- Find the measuring range of the LASER sensor:
 - Place the reflector below the Laser head so that the laser beam is reflected.
 - Shift the Laser head by turning the hand wheel of the Shrinkage Cone until green LED on the sensor comes on.
 - Turning the wheel in the opposite direction until the red LED comes on.

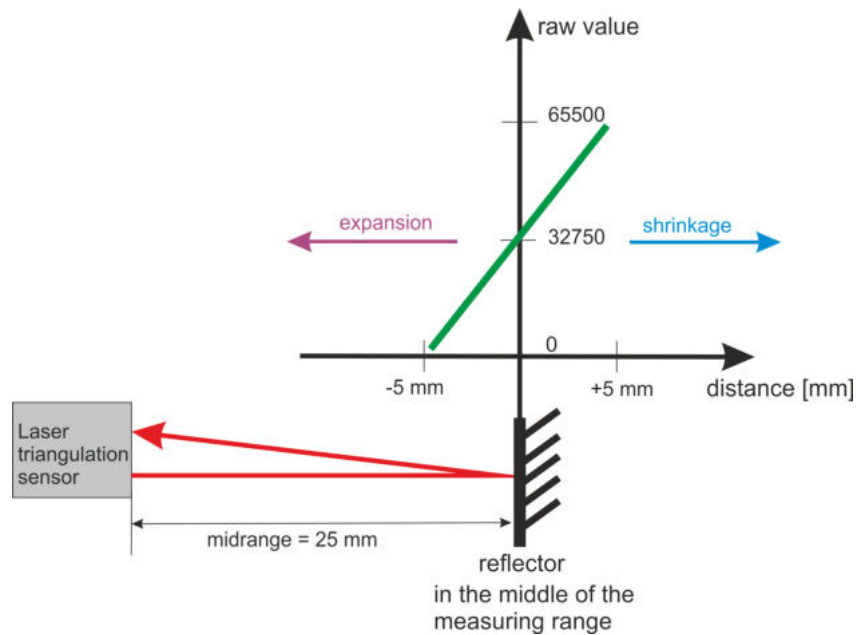


Figure 14: Adjustment of the LASER triangulation sensor

- Go back to place the LASER in the middle of the measuring range. The LED light is switching from green to yellow/green.

The measurements can be started (see chapter 5).

After the measurement is done, the hardened sample can easily be removed from the sample container. The PE foil can be removed by peeling off the sample. Not damaged foil can be reused.

At www.schleibinger.com/video/schwindkegel.wmv you may find a small video explaining the Shrinkage Cone handling.

Systems Maintenance

Keep the Laser surface clean! Do not use abrasive materials for cleaning!

All not coated metal parts should be cleaned with an oily cloth.

5 The Software

The software is quite similar for all shrinkage test systems.

5.1 Recording Data

As soon the data logger get power, data acquisition starts. This is shown by blinking of the green LED "OK" at the front-side of the data logger and a LED from the measuring sensor lights up if connected. The PC is only required for setup and data transfer.

5.2 Software Handling

The operation of the devices will be done by a Web-Browser-Software. To communicate with the data logger start at your PC your web browser.

Enter the host name or the IP address at the address line of your browser. The start screen will appear in the browser (Fig. 15).

In the header of the page on the left the drop down menu **All** is shown. From this menu all channels will be controlled in the same way. For example starting the measurement, set up of the real time clock, showing all data numerical and graphical (Fig. 16).

The single channels are listed from the button **All** on the right side. Depending on installed options these are the single sensors like LASER sensors for the TLMS or Shrinkage Cone, LVDT sensors for the Shrinkage Drain and Bending Drain, Temperature sensor, combined relative humidity and temperature sensor and a balance signal.

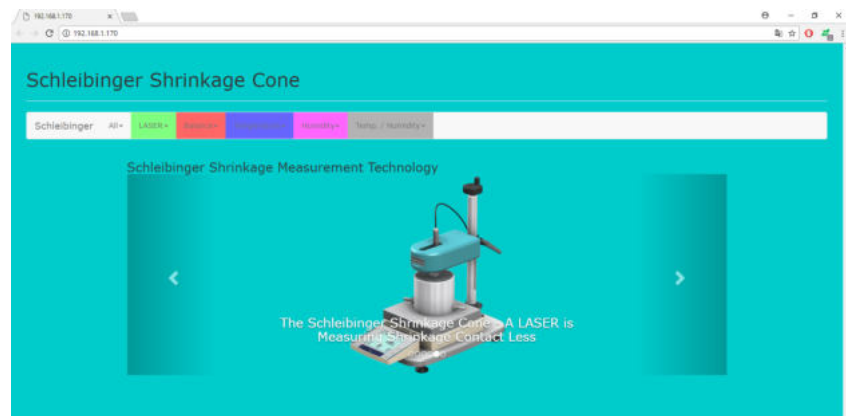


Figure 15: Start screen

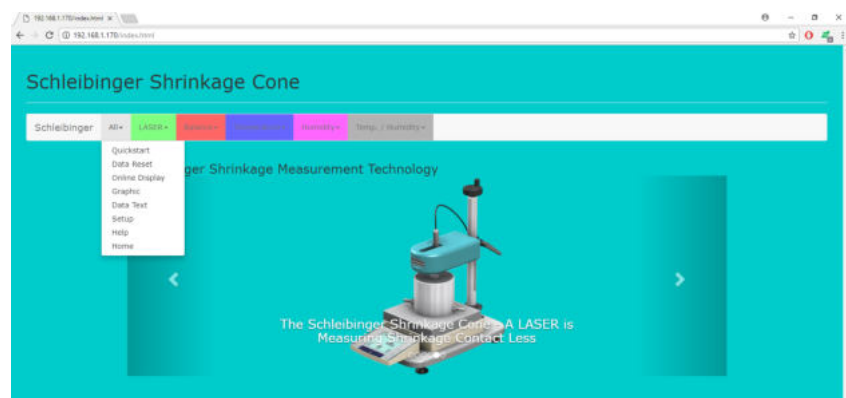


Figure 16: Main menu

5.2.1 Singel Channel Setup

The configuration of the measurement can be done from the **Setup** (Fig. 17). For each channel:

- Recording interval (**Sampling Rate**) can be selected from 10 seconds to 10 minutes (Fig. 17]. The appropriate measurement values are recorded according to the set interval.
- **Limit** value for each channel can be specified. If the **Limit** set to infinitely the data will be collected according to the set recording interval of the sampling rate. If the LIMIT is set to for example

$n=5$ the data logger will record the additional data where the difference of the measured value between two measurement points bigger than 5. This gives the possibility to record the changes in the measured value independent from the set recording interval. The unit of the LIMIT is due to the channel selected.

- **Time Format** of the recording interval can be selected. The **Time Format** can be chosen between Time/s and $n \cdot \text{smaplingrate}/s$. When selecting Time/s and a sampling rate of for example 30s the data logger will record data at 30s, 61s, 90s, 119s ... The reason for this are small deviations in the response time of the several software processes running on data logger. If this is not desired please select $n \cdot \text{smaplingrate}/s$ for the **Time Format** Setup or in the Excel worksheet. From this the actual measuring time is rounded down to the recording interval from the sampling rate.

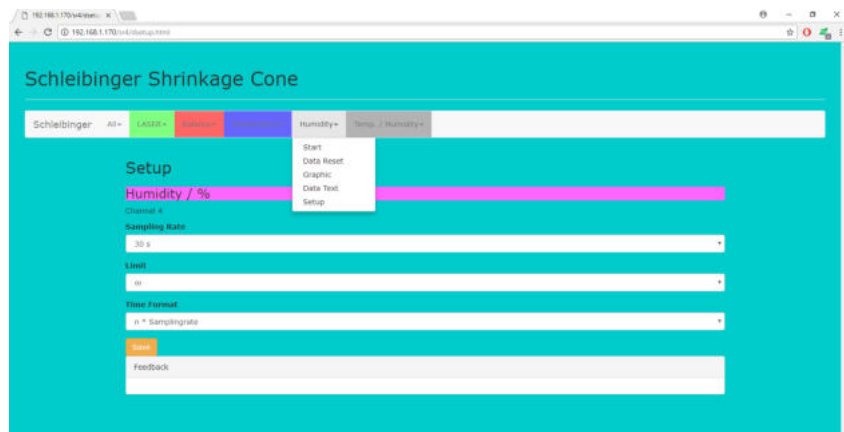


Figure 17: Channel setup

5.2.2 All Setup

The data logger uses the 24-hour clock setting.

The setup of date and time from the system time or your own time can be done [Fig. 18). Be careful, the European time format is used.

day.month.year:hour:min for example 26.03.03:12:11.

Press the **Set Date and Time** button for confirmation.



Figure 18: Setup of date and time

5.2.3 Start Measurement of single sensor

It is possible to start the measurements for each sensor separately. Starting the measurement can be done as follows:

- Check the LASER position as described in chapter 4
- Select the appropriate channel in the header line.
- Check the Laser position by displaying the raw values with: **All - Online Display** and select **Start** (Fig. 19). The raw value from the Laser sensor should be in the range of **32500 to 33000**.

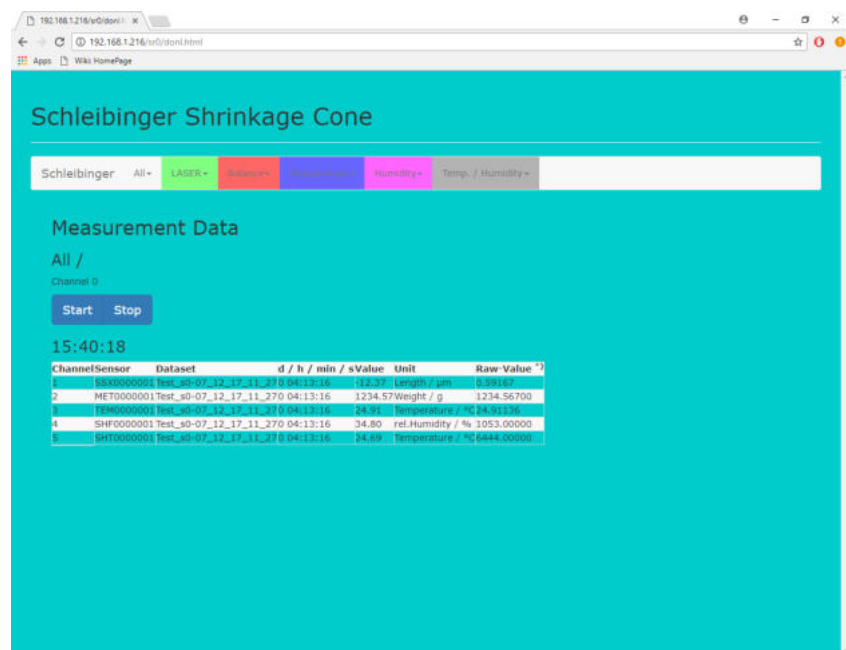


Figure 19: Measurement values in a numerical format

- Select **Offset** and press the button **Offset=0**. The measured values are set to zero (Fig. 20).

By offsetting only the measured values of the channel will set to zero. The time of the measurement will still continue.

please note:

For temperature and combined temperature and humidity sensors no offset is possible.

- Select **Start** for measurement start. Enter the filename (optional) and click on **Start** for setting the time to zero (Fig. 21).
- Select **Data Reset** for emptying the data file.
- Click on **Erase** Fig. 22

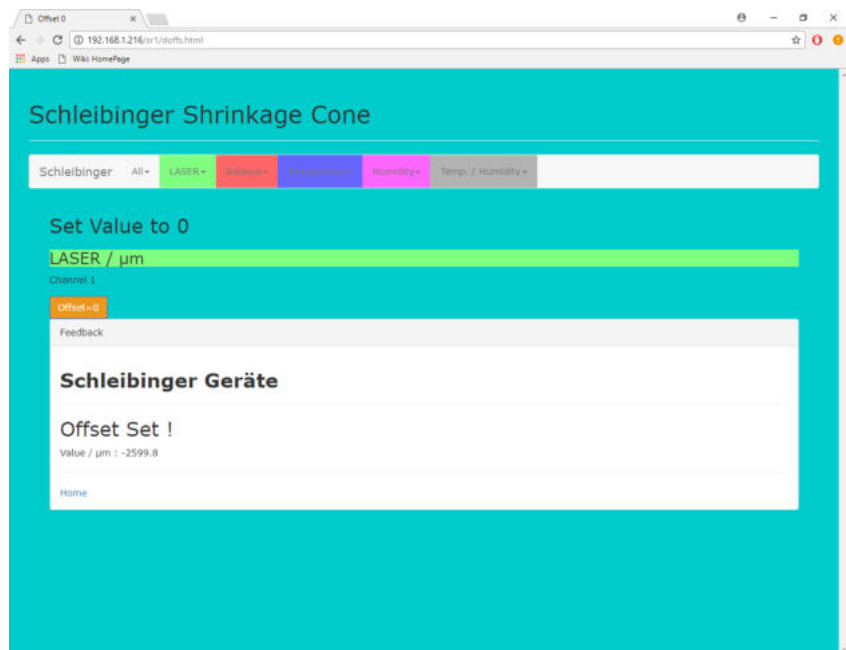


Figure 20: Offset zero

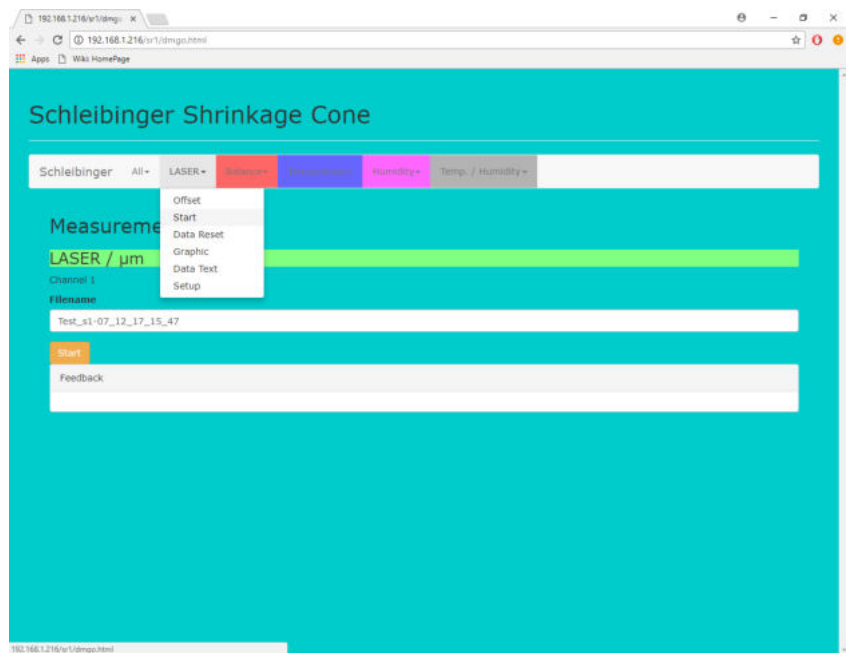


Figure 21: Measurement start

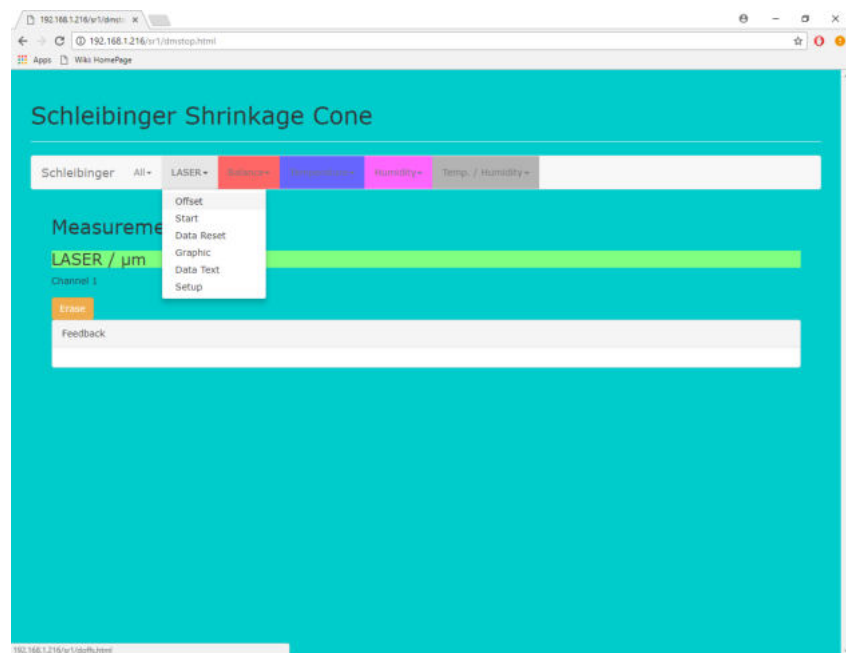


Figure 22: Data reset of single channel

5.2.4 Start Measurement with Quickstart

The start of the measurement can be done for each sensor individually or for all sensors at the same time.

Quickstart can be carried out as follows:

Attention: All data from all channels will be erased!

- Check the range for each sensor (see also chapter 4)
- Click on **All**
- Select **Quickstart**
- Enter the filename (optional). The filename will only appear in the column DATASET from **All - Online Display** (Fig. 19)
- Click **Start**

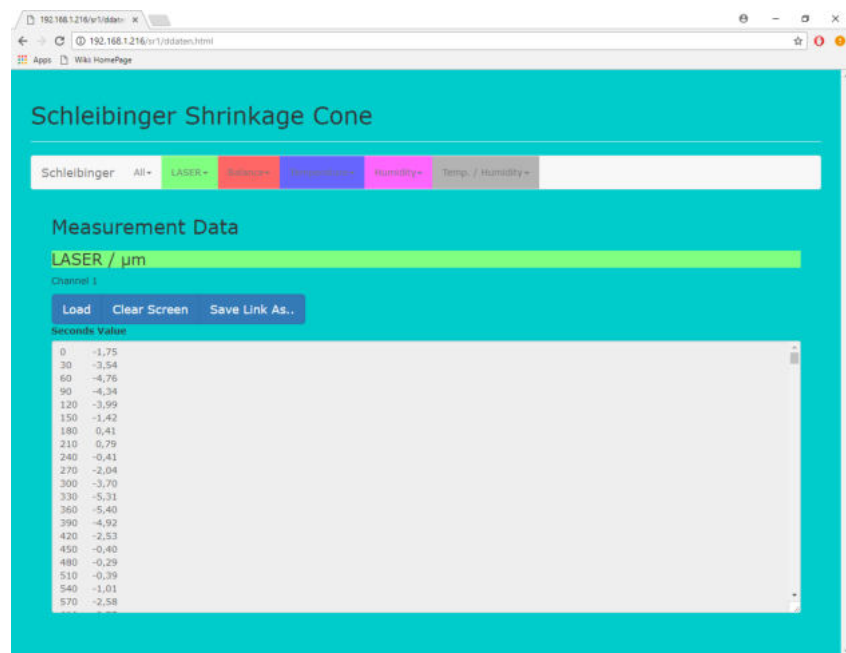


Figure 23: Measurement values of single channel as text file

5.3 Transferring the datasets

The measurement will be stored locally on the data logger. The memory is non-volatile. For the download of the measured data web browser can be used.

5.3.1 Data file

For each channel text data file is available. For the first channel **data1.txt**, for the second channel **data2.txt** and for the following channel (**data_n.txt**) accordingly will be generated.

5.3.2 Data Text single channels

- Select the appropriate channel on the header of the page
- Select **Data Text** and press **Load**
- All measuring data values will be displayed (Fig. 23)
- In the first column seconds since start of the measurement are shown. In the second column the measured values are displayed. The unit of the measured values corresponds to the channel was used and is shown under the header line.
- All columns are separated by tabs.

The data can be copy to the other program like Excel using the clipboard or directly by selecting **Save Link As...**

For displaying the data in Excel the browser address from the text file should be copied for example: `http://192.168.1.40/daten/data1.txt`.

Open a new Excel sheet and insert the data as following: **data - extern data - data from web**. Insert the copied address, click **import** and follow the import wizard. The data are imported.

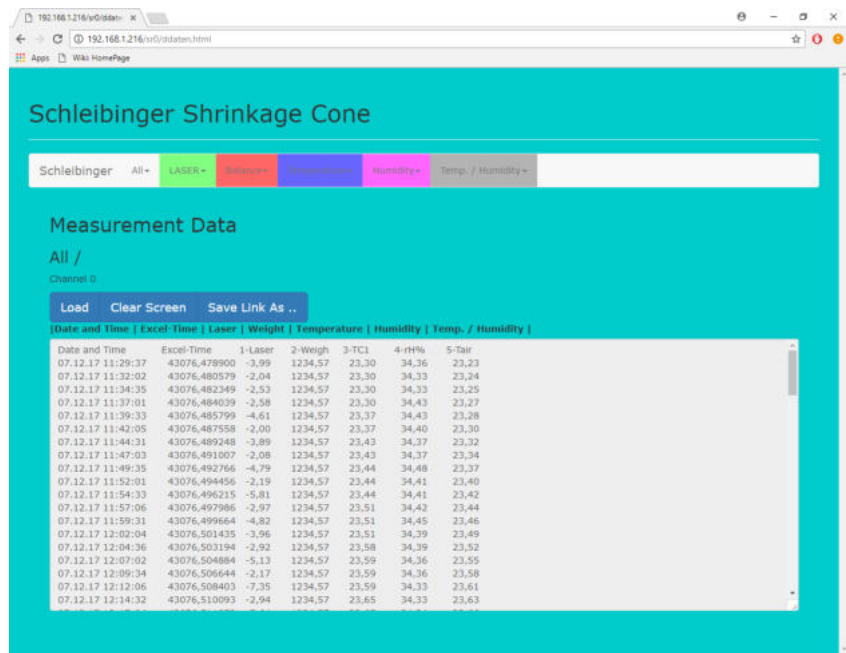


Figure 24: All channels data as text file

5.3.3 All Channels

The data file generated for **All** contains all data from all channels in one (Fig. 24). The format is as follows:

Date	Time	Excel-Time	Channel 1	Channel 2
12.08.04	10:40:32	38211,444815	3999,6	-221,0

please note:

The recording interval is 10 times lower compared to the channel 1.

The Excel Time is shown the internal Excel time format. The digits before the comma show the number of days since January, 1st, 1900. The digits after the comma show the fractal part of one day. For example noon time means 0.50000 and 6a.m. means 0.2500. Correct date and time will be shown after import the data into Excel and formatting it as date and time. For displaying the data in Excel the browser address from the text file should be copied for example:

`http://192.168.1.40/daten/data0.txt`

Open a new Excel sheet and insert the data as following: **data - extern data - data from web**. Insert the copied address, click **import** and follow the import wizard. The data are imported. Alternative, the data file can be saved by selecting **Save Link As....**

5.3.4 FTP

The power user can also use FTP for data transfer. Login name is `ftp`, password is also `ftp`. The datasets are in `/httpd/htdocs/daten`. Don't use the Internet-Explorer for this. Its is not according to the ftp standard. We recommend Filezilla (free software), wise-ftp or similar programs.

5.4 Plotting the Measurement Data in HTML5

The web interface of the data logger is offering a modern method to display the measurement data in a graphical way.

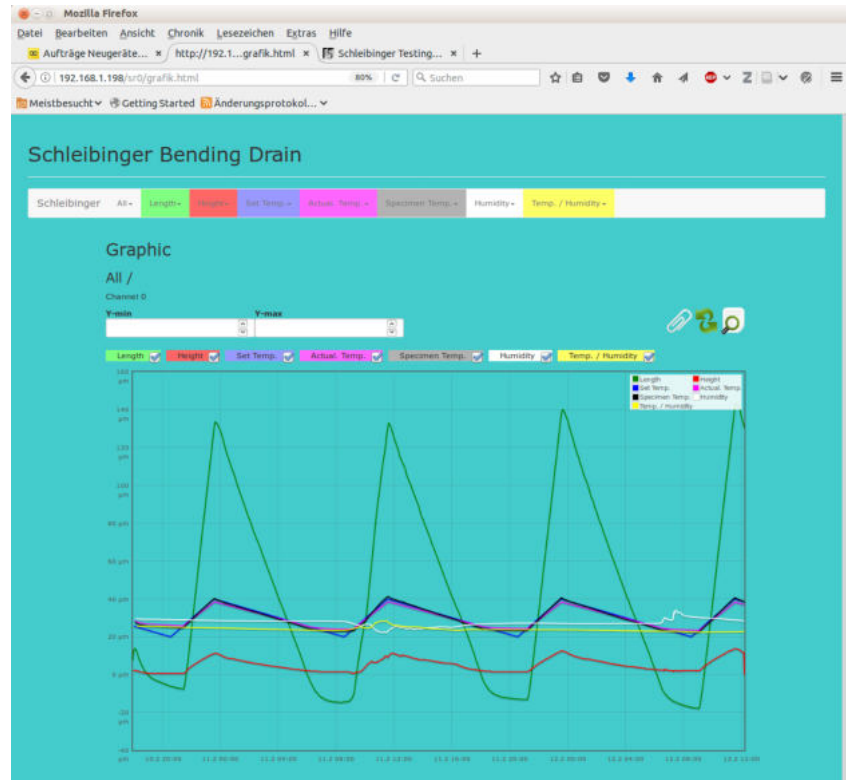


Figure 25: plotting a measurement curve in the Web-Browser

5.4.1 Channel Selection

In the upper area you may see check boxes where you may select the channels that should be shown. The color of the curves are the same then the background color of the channel names.

After selecting the required channels, you have to click on the icon with the two green arrows to reload and draw the data.

5.4.2 Zooming the Y-axis

The FLOT software is trying to find an optimal y-range for the data. You can select the range by putting in valid numbers in the min: and max: input fields.

5.4.3 Zooming the Time Axis

Please press the left mouse button and move the mouse over the region of interest in the time range. The background will change to light yellow. If you release the mouse button again the plot will be refreshed. If you click on the magnifier icon the whole time range will be shown again.

5.4.4 Insert a Legend

Clicking on the paper-clip icon will open an input field for a text legend, shown in the graph.

5.4.5 Printing the Graph

Firefox: please use the print function of the browser. Select actual frame in the in the printing options dialog of the browser to print the graph without the menus around.

6 Bibliography

References

- [1] EN 13892-9: "Methods of test for screed materials, Part 9: Determination of shrinkage and swelling" 03/2017.
- [2] ASTM C 1581-09a. "Standard Test Method for Determining Age at Cracking and Induced Tensile Stress Characteristics of Mortar and Concrete under Restrained Shrinkage" , 2009
- [3] ASTM C 827-95a (Reapproved 1997) "Standard Test Method for Change in Height at Early Ages of Cylindrical Specimens from Cementitious Mixtures", 1997
- [4] Bludau W, "Lichtwellenleiter in Sensorik und optischer Nachrichtentechnik", Springer Berlin 1998
- [5] Breitenbücher R, "Zwangsspannungen und Rissbildung infolge Hydratationswärme" Dissertation TU München, München, 1989
- [6] Bühler E, Zurbriggen R, "Mechanisms of early shrinkage and expansion of fast setting flooring compounds" Tagung Bauchemie, 7./8. Oktober 2004 in Erlangen Neubauer J, Goetz-Neunhoeffler F, hrsg. von der GDCh-Fachgruppe Bauchemie, 2004
- [7] EN 12617-4:2002, "Products and systems for the protection and repair of concrete structures. Test methods, Part 4: Determination of shrinkage and expansion"
- [8] Gerstner B, Haltenberger H, Teubert O, Greim M, "Device for measuring deformation of mortar in two directions under different temperature conditions has sensors for simultaneous measurement of vertical and horizontal mortar movement" German Patent Application DE000010123663A1, 2001
- [9] Greim M, Teubert O, "Appliance for detecting initial expansion and shrinkage behavior of building materials based on contactless measurement of change in filling level of container of fresh material specimens until set", German Patent Application DE000010046284A1, 2000
- [10] Ilschner B, Singer RF, "Werkstoffwissenschaften und Fertigungstechnik: Eigenschaften, Vorgänge, Technologien" Springer Berlin 2010
- [11] Jensen OM, Hansen PF. "A Dilatometer for Measuring Autogenous Deformation in Hardening Portland Cement Paste" Materials and Structures : Research and Testing. 28:406-409, 1995
- [12] Lorenz OK, Schmidt M, "Aufschüsseln schwimmend verlegter Zementestriche", ibausil, 13. Internationala Baustofftagung September 1997, hrsg. Stark J. Band 1, 1997
- [13] Lura P, Durand F , Jensen OM, "Autogenous strain of cement pastes with superabsorbent polymers", International RILEM Conference on Volume Changes of Hardening Concrete: Testing and Mitigation, Jensen OM, Lura P, Kovler K (eds), RILEM Publications SARL 2006
- [14] Sören Eppers Assessing the autogenous shrinkage cracking propensity of concrete by means of the restrained ring test Die Bewertung der autogenen Schwindrissneigung von Beton mit Hilfe des Ring-Tests

-
- [15] Sören Eppers, Christoph Müller On the examination of the autogenous shrinkage cracking propensity by means of the restrained ring test with particular consideration of temperature influences
 - [16] Prof. Dr.-Ing. Harald S. Müller, Dipl.-Geol. Dipl.-Min. Astrid Hirsch, Dr.-Ing. Vladislav Kvitsel Institut für Massivbau und Baustofftechnologie, Karlsruher Institut für Technologie (KIT) Prof. Dr.-Ing. Rolf Silbereisen, Dipl.-Ing. Carsten Becker CEMEX Deutschland AG Schwindarmer Beton ? Entwicklung und Möglichkeiten
 - [17] Frank Apicella, BASF Corp - Construction Chemicals "Crack-Free" Repair Materials ... Are We There Yet ? Minnesota Concrete Council
 - [18] Jae-Heum Moon, Farshad Rajabipour, Brad Pease, and Jason Weiss Quantifying the Influence of Specimen Geometry on the Results of the Restrained Ring Test Journal of ASTM International, Vol. 3, No. 8, Paper ID JAI100436
 - [19] Henkensiefken et al. 2008 CBC Reducing Restrained Shrinkage Cracking in Concrete: Examining the Behavior of Self-Curing Concrete Made using Different Volumes of Saturated Lightweight Aggregate

List of Figures

1	Schleibinger Shrinkage measurement equipment	5
2	Under the prerequisite of an isotropic shrinkage (or expansion), the radius r and the height h of a cone shrink (expand) in the same way: $h' = k \cdot h$ and $r' = k \cdot r$ (k for example 80%) $\Rightarrow V'/V = 0.8^3 = 0.512$	6
3	The Shrinkage Cone as exploded view. Cone formed sample container, partition foil, sample and reflector	7
4	Data logger: front side and back side.	9
5	Wiring the shrinkage cone	10
6	Accessing the data logger with a symbolic server name.	11
7	Readout the IP address to the data logger with the program chiptool.	11
8	Accessing the data logger with a fix IP address.	12
9	Configuration of PC for a direct connection with data logger.	13
10	Configuration of the data logger for direct connection using program chiptool.	13
11	Thermocouple type K	14
12	combined humidity and temperature sensor	15
13	SHT75 sensor used with maximal RH-tolerance at 25 °C (left) and maximal T-tolerance (right)	15
14	Adjustment of the LASER triangulation sensor	17
15	Start screen	18
16	Main menu	18
17	Channel setup	19
18	Setup of date and time	19
19	Measurement values in a numerical format	20
20	Offset zero	21
21	Measurement start	21
22	Data reset of single channel	22
23	Measurement values of single channel as text file	23
24	All channels data as text file	24
25	plotting a measurement curve in the Web-Browser	25